# **GENTAURUS 5** MK2

**Quick links** 

<u>Overview</u>

Product Variant Matrix

LED Indicator Definitions

**Dimensions** 

**Installation** 

**Connector Information** 

Recycling and Environmental Protection



©Copyright Cosworth Electronics Ltd | All Content is Proprietary and Confidential. Brookfield Technology Centre, Twentypence Road, Cottenham, Cambridge, CB24 8PS.

## **Centaurus 5 Mk2**

#### Overview

- 64 x PWM Power Outputs
- Configurable output grouping
- Expandable I/O with EtherCAT™
- Ultimate in power control & configuration

Centaurus 5 Mk2 offers 64 power outputs that can be grouped together for larger consumers, all with PWM capability, delivering a greater amount of power outputs and configurability than its predecessors. Outputs and LED indicators can be grouped and controlled to meet user specific requirements, configured using an intuitive and simple to use software interface. Pin assignment is made quick and easy to understand using a graphical representation on each connector — all within Cosworth Toolset.

Electrical data	
Operating Voltage	6.6 to 31.5V
Current consumption*1	925mA @ 14
Load Dump Protection	ISO 16750-2:2012 pulse 5a, Ri(min) = 1Ω"
Communication	
Ethernet	2x 100MB/S
CAN Ports	2 x Independent CAN Ports Max BAUD rate; 1MBit/s 128x Message Buffers per Port Software selectable 120Ω Termination
LIN Ports	2 x LIN Bus Master
EtherCAT	1 x EtherCAT Master
Serial Ports	1 x Bi-Directional RS232 Fixed @115200 BAUD Rate
Serial Debug Ports	1 x Bi-Directional RS232 Fixed @115200 BAUD Rate
Mechanical data	
Size	235 x 172 x 33.55 mm
Weight	1250 grams
Environmental	IP66
Material	6082-T6 Anodized xxx
Vibration	Cosworth DV-V®
Operating Temp	-20ºC to + 70ºC
Storage Temp	-20ºC to + 80ºC



New for Cosworth's power box range is support for ethernet driven displays and steering wheels (CDU 4.3, 7, 10.3, CCW Mk2, CCW Mk3, and I/O expansion via EtherCAT™, providing market leading levels of synchronicity with the SJU (Synchronous Junction Unit).

Cosworth's Auto-Coding platform is available on the Centaurus 5 Mk2, allowing for custom strategies to be developed in a MATLAB/Simulink® environment then deployed on the Centaurus 5. Mk2

I/O	
HSD Inputs	16 x 2.5A 488Hz PWM 32 x 7.5A 244Hz PWM 5 x 12A 122Hz PWM 7 x 25A 122Hz PWM 2 x 25A 122Hz PWM with Wiper 2 x 25A 244Hz PWM with Hi -Surge
LSD Outputs	5 x 488Hz @ 0.2A
Switch Inputs	6 x Switch inputs to VBatt or GND
Analogue Inputs	4 x 0 - 5V Filtered 3dB frequency of ~15.9kHz 2.1M Ω Impedance 12-bit Resolution
Sensor Supplies	4 x Selectable 5/12V 100mA @ 5V 700mA @ 12V
Motion Sensor	3-Axis Accelerometer ±16g
Internal Monitoring	Battery Voltage Box Temperature Internal PSU's Excitation Voltage Power Output Voltage Power Output Current Power Output Status
LEDs	6 x System Status LEDs 64 x Power Output Status LEDs



#### **Product Variant Matrix**

#### **Token Logging Options**

Variant	Centaurus 5 Mk2 520	Centaurus 5 Mk2 540	Centaurus 5 Mk2 560	
rt Number 01P-610100-520		01P-610100-540	01P-610100-560	
Capacity (MB)	1,024	1,024	6,140	
Bandwidth (bytes/sec)	50,000	50,000	250,000	
Sampling Rate (Hz)	500	500	1,000	
Burst Sampling Rates (Hz)	500	500	1,000	
No. of Burst Logging Tables	5	5	5	
Total no. of Channels	2,048	2,048	2,048	
Maths Channels	500	500	750	
Logic Channels Enabled		Enabled	Enabled	
Analogue Inputs 4		4	4	
Digital Inputs 6 (level)		6 (level)	6 (level)	
CAN Ports 2		2	2	
LIN Ports 2		2	2	
Ethernet (100MB/s) 2		2	2	
EtherCAT Ports -		-	1	
Ethernet Displays -		48	48	
Auto Coding Customer	Enabled	Enabled	Enabled	
Auto Coding Developer	Upgrade option	Upgrade option	Upgrade option	

#### **Ordering Information**


Part Number	
011-610140	Centaurus 5 Mk2
01P-610100-520	520 Token
01P-610100-540	540 Token
01P-610100-560	560 Token
01P-610100-AC-DEV	Auto Coding Developer Token

#### **Compatible Devices**

Compatible Devices	
CDU 4.3	01D-640030
CDU 7.0	01D-640040
CDU 10.3	01D-640060
Badenia 5	01L-650080
Badenia 2	01L-650100
RLU	01L-650030
SJU	01L-650050
CCW Mk2	01D-641150
CCW Mk3	01D-641350

Software Information		
S	Pi Toolset	Configuration software for power control and logging (v9 and above)
	Pi Toolbox	Professional Data Analysis (v10 and above)
rt se	Auto-Coding via MATLAB/Simulink®	Customer auto-coding are available via MATLAB/ Simulink® and Cosworth Workspace Editor

#### **LED Indicator Definitions**

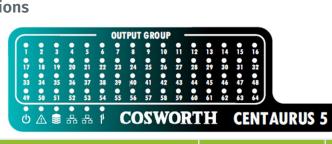


Legend	Function	Sequence	Period
_	No power to the Unit	Off	
ዓ	Initialising and waiting for clock sync	On	
	Unit operational	50% Flash (1Hz)	
	During startup a single flash LED test	Long Single Pulse	
$\square$	Normal running operation	Off	
	Logger error or no dataset loaded	On	
	During startup a single flash LED test	Long Single Pulse	
	Normal running operation	Off	
	Logger full and overwriting data	On	
	1000Base T. No connection established	Off	
	Connection established	50% Flash (1Hz)	
	Communication active	Flickering	
_	100Base T. No connection established	Off	
품	Connection established	50% Flash (1Hz)	
	Communication active	Flickering	
	100Base T. No connection established	Off	
움	Connection established	50% Flash (1Hz)	
	Communication active	Flickering	
	EtherCAT, no connection established	Off	
1	Connection established	50% Flash (1Hz)	
	Communication active	Flickering	

#### **Output Group LEDs**

L	.egend	Function	Sequence	Period
	•	Power Output Off	Off	
		Power Output On	On	

#### Dimensions

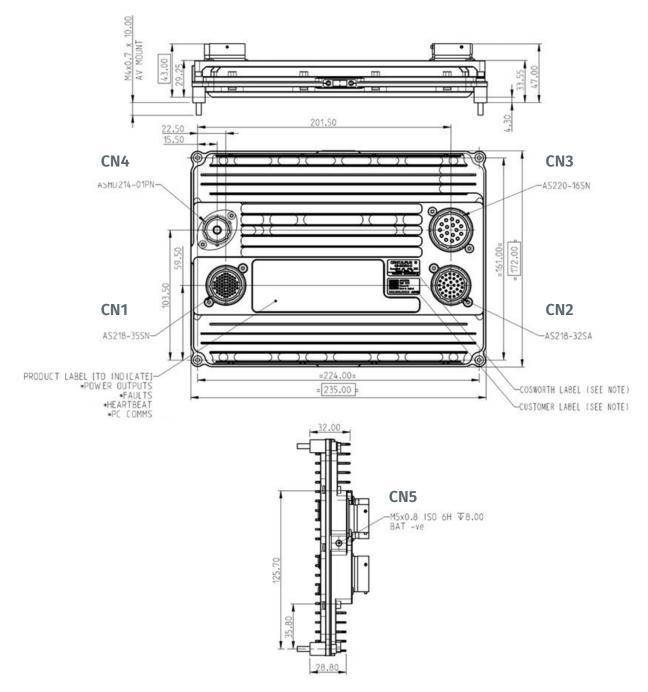

#### Installation

When you install the Centaurus 5 Mk2:

- Make sure that the unit is protected against severe vibrations by mounting using supplied AV mounting kit. Also make sure that the unit is not fouling other structures which may experience severe vibrations. The warranty will be void if mounted differently.
- Make sure that the unit is positioned in an area with an ambient temperature of less than 70°C or with sufficient cooling air flow to prevent over heating.
- Make sure that the unit is mounted away from sources of electrical interference.
- Make sure that the unit is mounted in position where unit will not come into contact with water.
- Make sure that the case is connected to ground via CN5 with 35mm<sup>2</sup> size cable.

#### **Connector Information**

All pin outs are grouped in function order, rather than pin order.

#### **CN1 Connector**

Connector	Mating Connector
AS218-35SN-943B	AS618-35PN

#### **CN1 Pinout**

	Token Variant				
Pin	520	540	560	— Description	
34	DBatt+VE	DBatt+VE	DBatt+VE	Digital supply +VE <sup>1</sup>	
43	DBatt-VE	DBatt-VE	DBatt-VE	Digital Supply -VE <sup>2</sup>	
28	Shutdown#	Shutdown#	Shutdown#	Active Low System Shutdown <sup>3</sup>	
41	ETH1-RX+	ETH1-RX+	ETH1-RX+		
42	ETH1-RX-	ETH1-RX-	ETH1-RX-		
39	ETH1-TX+	ETH1-TX+	ETH1-TX+	Ethernet 1 100BaseT for PC / expansion comms	
40	ETH1-TX-	ETH1-TX-	ETH1-TX-		
23	ETH2-RX+	ETH2-RX+	ETH2-RX+		
24	ETH2-RX-	ETH2-RX-	ETH2-RX-		
16	ETH2-TX+	ETH2-TX+	ETH2-TX+	Ethernet 2 100BaseT for PC / expansion comms	
15	ETH2-TX-	ETH2-TX-	ETH2-TX-		
2	N/A	N/A	ECAT-TX+		
6	N/A	N/A	ECAT-TX-		
7	N/A	N/A	ECAT-RX+	EtherCAT 100BaseT for system expansion	
3	N/A	N/A	ECAT-RX-		
47	CANH1	CANH1	CANH1		
48	CANL1	CANL1	CANL1	CAN port 1 with 1200hm software selectable termination	
50	CANH2	CANH2	CANH2	CAN a set 2 with 1200 km as floor as a last able to main time	
49	CANL2	CANL2	CANL2	CAN port 2 with 1200hm software selectable termination	
32	LIN1	LIN1	LIN1	LIN bus master 1	
33	LIN2	LIN2	LIN2	LIN bus master 2	
29	DEBTX	DEBTX	DEBTX	Debug commo	
38	DEBRX	DEBRX	DEBRX	Debug comms	
17	AIN1	AIN1	AIN1		
27	AIN2	AIN2	AIN2		
10	AIN3	AIN3	AIN3	4 x 0-5V 12-bit analogue inputs	
18	AIN4	AIN4	AIN4		
26	Switch Input 1	Switch Input 1	Switch Input 1		
25	Switch Input 2	Switch Input 2	Switch Input 2		
35	Switch Input 3	Switch Input 3	Switch Input 3	6 x Switch Inputs Software selectable for switch to Gnd or VBatt	
36	Switch Input 4	Switch Input 4	Switch Input 4	Soliware selectable for switch to Ghu or VBall	
45	Switch Input 5	Switch Input 5	Switch Input 5		
44	Switch Input 6	Switch Input 6	Switch Input 6		



### CN1 Pinout (continued)

Pin	Output				Description
PIN	Name	Current	PWM	Surge Time	Description
1	EXT5/12PSU1	100mA			
8	EXT5/12PSU2	@5V			
14	EXT5/12PSU3	700mA		N/A	4 x Sensor Excitations
9	EXT5/12PSU4	@12V			
5	Sensor Gnd				
13	Sensor Gnd				
37	Sensor Gnd	700mA	N/A	N/A	4 x Sensor Gnds⁴
46	Sensor Gnd				
65	Output 1	2.5A			
60	Output 2	2.5A	_		
64	Output 3	2.5A			
59	Output 4	2.5A			
58	Output 5	2.5A		8Hz 2ms	
61	Output 6	2.5A			
56	Output 7	2.5A			
55	Output 8	2.5A	( 0011-		16 x 2.5A Standard Outputs
53	Output 9	2.5A	488HZ		
51	Output 10	2.5A			
66	Output 11	2.5A			
57	Output 12	2.5A			
63	Output 13	2.5A			
54	Output 14	2.5A			
52	Output 15	2.5A			
62	Output 16	2.5A			
19	PWM LSD1	200mA			
11	PWM LSD2	200mA			
4	PWM LSD3	200mA	488Hz	N/A	5 x Low Side Drive Outputs
12	PWM LSD4	200mA			
20	PWM LSD5	200mA			
21	N/A				
22	N/A				
30	N/A				
31	N/A				

All pin outs are grouped in function order, rather than pin order.

#### **CN2 Connector**

Connector	Mating Connector
AS218-32SA-943B	AS618-32PA

#### **CN2 Pinout**

<b>D</b>	Output				Description
Pin	Name	Current	PWM	Surge Time	Description
Х	Output 17	7.5A			
E	Output 18	7.5A			
W	Output 19	7.5A	-		
V	Output 20	7.5A	-		
В	Output 21	7.5A	-		
Ν	Output 22	7.5A			
U	Output 23	7.5A			
Μ	Output 24	7.5A			
А	Output 25	7.5A			
b	Output 26	7.5A			
Т	Output 27	7.5A			
С	Output 28	7.5A			
С	Output 29	7.5A			
L	Output 30	7.5A			
f	Output 31	7.5A			
a	Output 32	7.5A	244Hz	2	32 x 7.5A Standard Outputs
D	Output 33	7.5A	244⊓2	2ms	
К	Output 34	7.5A			
g	Output 35	7.5A			
h	Output 36	7.5A			
R	Output 37	7.5A			
J	Output 38	7.5A			
d	Output 39	7.5A			
Ζ	Output 40	7.5A			
Ρ	Output 41	7.5A			
Н	Output 42	7.5A			
j	Output 43	7.5A			
Y	Output 44	7.5A			
S	Output 45	7.5A			
G	Output 46	7.5A			
е	Output 47	7.5A			
F	Output 48	7.5A			

All pin outs are grouped in function order, rather than pin order.

#### **CN3 Connector**

Connector	Mating Connector		
AS2200-16SN-943B	AS620-16PN		

#### **CN3 Pinout**

Pin	Output				Description	
PIN	Name	Current	PWM	Surge Time	Description	
S	Output 55	12A				
R	Output 59	12A				
Μ	Output 60	12A	122Hz	2ms	5 x12A Standard Outputs	
N	Output 61	12A				
Ρ	Output 63	12A				
D	Output 51	25A			2 x 25A Outputs with Wiper Support⁵	
В	Output 52	25A	122Hz	2ms	NOTE not to be used for loads that can generate back emf, such as starter solenoids.	
F	Output 53	25A				
G	Output 54	25A			7 x 25A Standard Outputs	
К	Output 56	25A				
J	Output 57	25A	122Hz	2ms		
Н	Output 58	25A				
С	Output 62	25A				
E	Output 64	25A				
A	Output 49	25A	277112	20,000	2 x 2EA Outputs with Lligh Surge Support	
L	Output 50	25A	244Hz	20ms	2 x 25A Outputs with High Surge Support <sup>6</sup>	

#### **Output Restrictions**

Most outputs in the Centaurus 5 Mk2 use Smart-fets, these have a body diode that will conduct in the reverse direction allowing current to be dumped from the load back to the battery. Four outputs are different:

Outputs 49 and 50 use conventional fets and are protected by a diode circuit from reverse battery connection. Excess voltage imposed on one output will appear on the other if it is turned on, potentially damaging the load powered from Centaurus.

Outputs 51 and 52 are designed for three brush wiper motors and have extra circuitry to prevent current flowing back from the slow speed brush into Centaurus when the high-speed brush is energized.

Loads that can generate back emf or need to dump power back to the battery must not be connected to any of these four outputs or damage may be caused either to Centaurus or sensitive loads.

All pin outs are grouped in function order, rather than pin order.

#### **CN4 Connector**

Со	nnector	Mating Connector		
A	SHD214-1PN-974C	ASHD614-1SN-C35		

#### **CN4 Pinout**

Pin		Name	Input			
	Pin		Current	Surge Time		Description
			Current	3hrs	2min	
	1	Batt+	150A	200A	250A	35mm <sup>2</sup> cable must be used to achieve full current rating <sup>1,7</sup>

#### **CN5 Connector**

Connector		Mating Connector		
	M5x0.8x8mm	M5 Bolt		

#### **CN5 Pinout**

	Name	Input			
Pin		Current	Surge Time		Description
			3hrs	2min	
1	150A	Batt-	200A	250A	35mm <sup>2</sup> c able must be used to achieve full current rating for load dump protection <sup>8</sup>

1. CN1 Pin 34 DBatt+ will only supply power to the processor leaving the outputs unpowered, This can be used for a bench supply when loading code or alternatively a backup battery can be connected to allow the processor to remain powered in the event of a main battery Supply shutdown.

2. CN1 Pin 43 DBatt– is common with CN5 Batt– this pin can be used for a bench supply when loading code, this pin is not intended for main power Gnd.

3. CN1 Pin 28 Shutdown# is designed allow the user to shutdown the unit via a single switch to Gnd.

4. CN1 Pin 5, 13, 37, 46 Sensor Gnd are all common within the unit and connected to case.

5. CN3 Pin D, B Output 51 and 52 are both fitted with additional circuitry to allow for the direct connection to wiper motors allowing for "Freewheel" and "Park".

6. CN3 Pin A, L Output 49 and 50 are both fitted with additional circuitry to allow for high surge conditions with capacitance loads, for example, 10000uf

7. CN4 Pin 1 Batt+ will supply power to both the processor and outputs. This should be connected to a 35mm<sup>2</sup> cable to ensure the full rating is achieved.

8. CN5 Pin 1 Batt- is required for load dump situations and should be connected to 35mm<sup>2</sup> cable to ensure the full rating is achieved.



#### **Recycling and Environmental Protection**

Cosworth Electronics is committed to conducting its business in an environmentally responsible manner and strive for high environmental standards.

**Manufacture**: Cosworth products comply with the appropriate requirements of the Restriction of Hazardous Substance (RoHS).

**Disposal**: Electronic equipment should be disposed of in accordance with the regulations in force and in particular in accordance with the Waste in Electrical and Electronic Equipment directive (WEEE).

#### Battery

This equipment contains a rechargeable battery (Manganese Silicon Lithium).

The equipment may be returned to Cosworth Electronics for a replacement battery. A charge will be made for this service.

To remove the battery for recycling:

- Remove the case(s).
- Remove printed circuit boards from the case. Remove the battery from the printed circuit board.
- Dispose of the battery in accordance with the regulations in force.
- Removal of the battery will result in the warranty of the unit being void.

#### Document: 29L-610100-P

**Rev:** 5

All Information in this document is correct as of 20/12/2024

**T (UK)** +44 (0) 1604 598 300

**T (US)** +1 (317) 644 1037

E enquiries@cosworth.com

W www.cosworth.com

© Copyright Cosworth Electronics Ltd | All Content is Proprietary and Confidential. Brookfield Technology Centre, Twentypence Road, Cottenham, Cambridge, CB24 8PS.

