

# CHANGE LAP NUMBERS

Revision	0.9
Date	13/03/2025

## Change lap numbers overview

You can reset outing and lap numbers on the **Actions** tab when connected to a device.

### Actions tab

The **Lap** node on the **Actions** tab allows you to reset the lap number and the outing number on the device. Select the **Outing** and **Lap** check boxes, and then enter the required outing and lap numbers in the text boxes.

Click the **Set Next Outing and Lap Numbers** button to set the target value. The newly defined outing and lap numbers are included in the next logged outing.

**Note:** The action does not reset the value of the current outing. You must stop logging and restart or power cycle the device to reset the outing number.

Change Outing and Lap Numbers

This action allows you to set the values for the next outing, and/or lap numbers. The change to the lap number will take immediate effect, while any change to the outing number will only change at the start of the next outing.

Outing

Lap   Use Default

Set Next Outing and Lap Numbers

If the change in an outing number being used matches data already logged on the device, that data will be deleted.

## Circuits Node

### Lap reset

In the **Circuits** node (see [Setups - Circuits](#)) you can create multiple conditions to reset the lap number from a button press (See [Setups - Buttons](#)), an event, or at the start of a new outing.

Lap Reset

Add lap reset event

Button   Press  Release  Click  Hold  Long Hold

Event

Button

New Outing

Lap Number after Reset  *Zero and negative numbers are permitted*

Lap Increase   Press  Release  Click  Hold  Long Hold

Lap Decrease   Press  Release  Click  Hold  Long Hold