

<b>ALLOWED VERSIONS</b>	Revision	0.15
	Date	17/02/2025

### Allowed versions overview

You can use the **Allowed Versions** node to set the minimum and maximum version of Toolset allowed to modify setups. This feature is useful if a manufacturer wishes to lock the setup to a specific version (if the series/setup is homologated), so that customers can only use that version of software to modify the setup.

### Setting the allowed version

You can configure the lowest and highest version of software, and then lock or hide the **Allowed Versions** node using the **Setup Locking** node to make it inaccessible to a customer.

You can also configure a message to be displayed if a customer tries to open the setup in an incorrect version of Pi Toolset.

**Allowed Versions**

**Restrictions**

Define what versions of the application are allowed to send this setup and what error message is presented to the user.

Lowest Version

Highest Version

Error Message 

This setup is not supported in this version of the application.