

SETUPS - TELLTALES

Revision	0.13
Date	13/03/2025


Telltale overview

Telltale are channel statistics that are published at end of a lap over telemetry. You can add telltales to the **Tabular Outing Report** display on the [Live Data](#) page (see [Live Data](#)).

Note: To view the telltale over telemetry you must add the output channel named after the telltale to the telemetry table (see [Telemetry](#)).

Add a telltale

Click the + tool to add a new telltale (1). You can import and export telltales between existing setups with the 'import' and 'export tools' (2). Use the 'bin' tool to delete telltales (3). Use the channel rates shortcut (4) and the telemetry shortcut (5) to quickly navigate to the **Channel Rates** and **Telemetry** nodes. Use the 'wrench' tool (6) to configure telltale reset events.

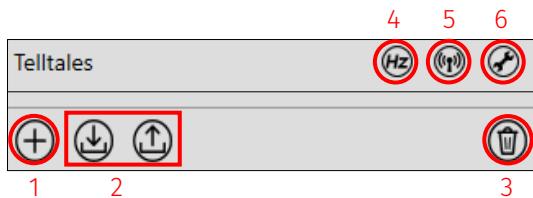

Configure a telltale

Add a telltale and enter a name and optional description (1/2). Click the 'browse' icon (3) to select the input channel from the available channel list (4). Select the channel statistic (minimum, maximum, mean, difference, or end) from the **Statistic** dropdown menu (5) and the telltale calculation rate from the **Rate** dropdown menu (6). Select 'Auto' to use the rate from the input channel.

