


Get started and connect to your device


Configure the network (Ethernet) connection

Once you have installed Pi Toolset, you need to connect to the device using the Ethernet communication lead, and then set up the network connection on the **Settings** page.

On the **Network** page, click the required adapter, confirm that it is connected (1), and then select **Use Selected Adapter** (2). If the adapter is not immediately displayed, click **Refresh Network Settings** (3).

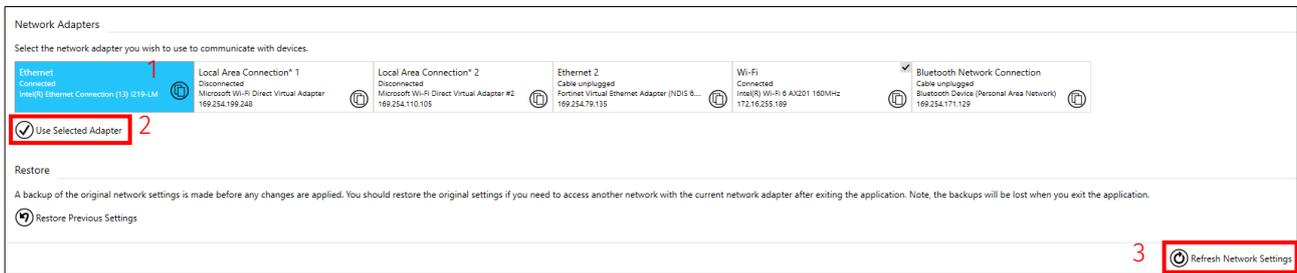



If there is a network error (for example, multiple network adapters are found), an error message is displayed. Make sure that the ethernet adapter is connected before you continue.

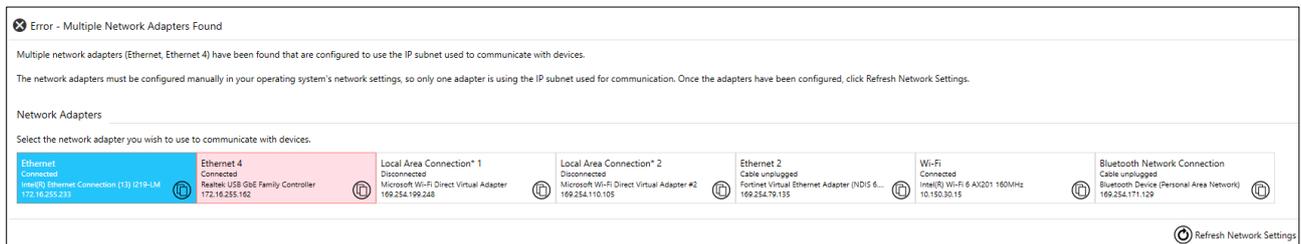

When network settings are configured, return to the **Devices** page.

Add a device

On the **Devices** page, use the **+** button to add a new device (1). The device is displayed in the menu. Select the device (2), and then click **Add** (3). Wait for the device to initialise and reach the 'Idle' state (4).

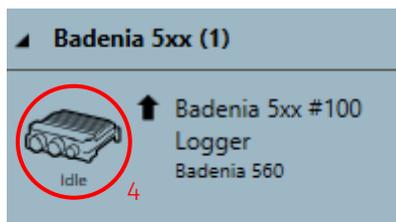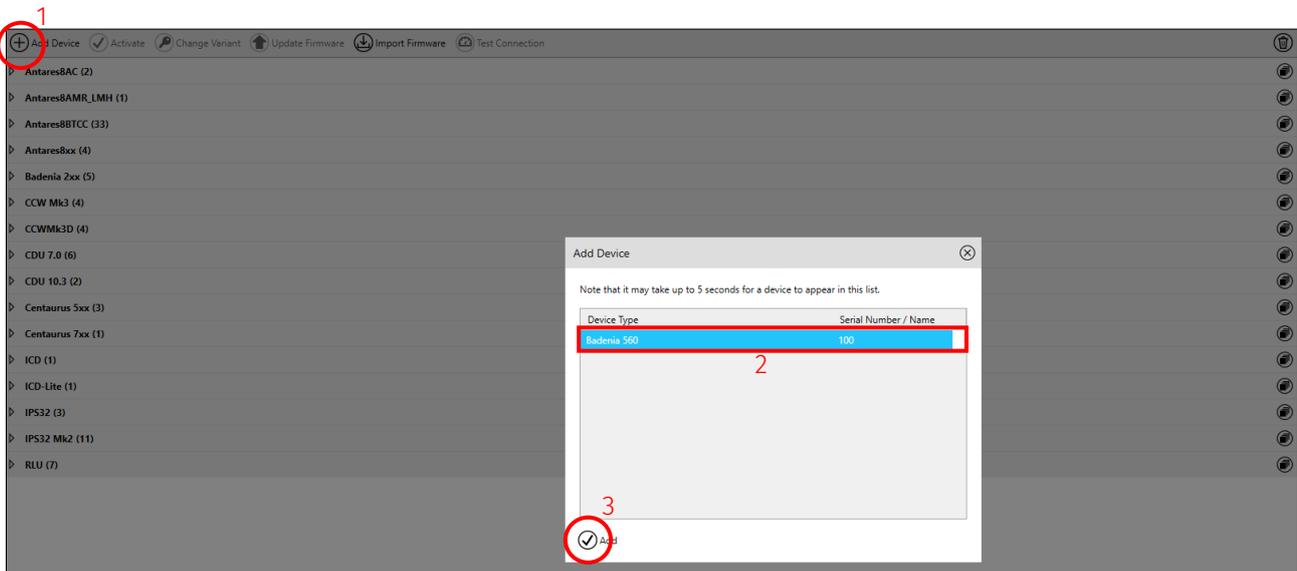

Activate a device

To read live data and send setups to the device, the device must be activated. Select the device (1), and then click **Activate** (2). To distinguish the active device if there are multiple known devices, the active device appears in a grey box.

