


Logging overview

The **Logging** node on the Actions tab allows you to manually enable and disable device logging when connected to a device. The current logging status of the device is displayed under **Logging Status**.

Select **Enable Logging** to manually start logging (1). Select **Disable Logging** to manually stop logging (2). If any override is selected, select **Revert to the Default Logging Status** to clear any manual logging overrides and use the standard logging conditions configured for the device (3).

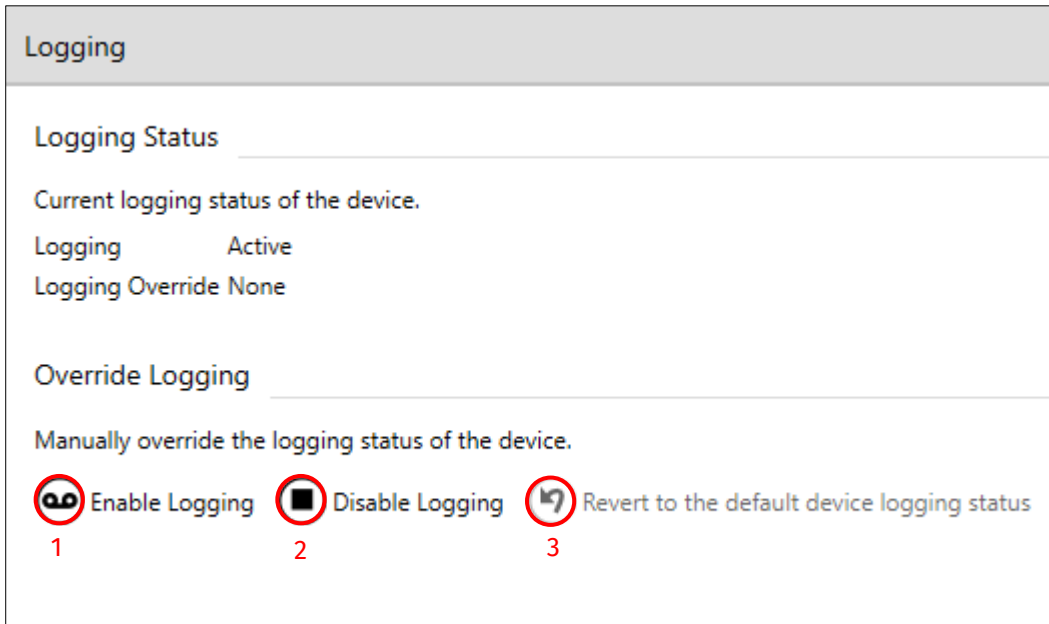

The current **Logging** status (Active or Inactive) and **Logging Override** status (None, Force On, or Force Off) are displayed in the **Logging Status** section.